

# OWNER'S MANUAL

## VRF Multi Split Air Conditioner

### YAP1F CONTROLLER




(English) (YAP1F)

**WARNING:** Failure to install or commission the product in compliance with these instructions, or failure to do the job properly and competently, may void the customer's warranty. Further it could expose the Installer and/or the Retailer to serious liability.

# CONTENTS





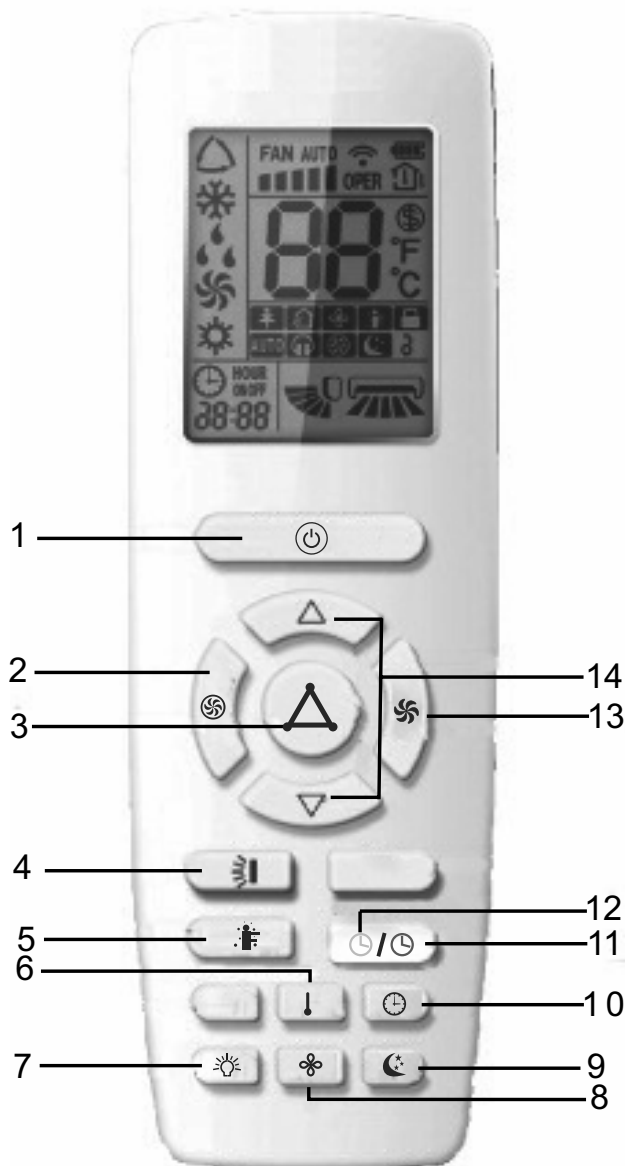








 
<b>1. REMOTE CONTROLLER</b>	<b>2</b>
1.1 Using the Remote Control	3
1.2 Preparation Before Operation	3
1.3 Using the Remote Control	3
1.3.1 Selecting Operation Mode	3
1.3.2 Setting Temperature	4
1.3.3 Adjusting Fan Speed	4
1.3.4 Setting Swing Function	4
1.3.5 Setting Turbo Function	5
1.3.6 Setting Light Function	5
1.3.7 Viewing Ambient Temperature	5
1.3.8 Setting X-Fan Function	5
1.3.9 Setting Sleep Function	6
1.3.10 Setting I Feel Function	6
1.3.11 Setting Timer	6
1.4 Special Function Buttons	7
1.4.1 Setting Child Lock	7
1.4.2 Switching Temperature Scale	7
1.4.3 Setting Energy Saving Function	7
1.4.4 Setting Absence Function	7
1.5 Replacing Batteries	8

# 1. REMOTE CONTROLLER








# 1. REMOTE CONTROLLER - cont.

## 1.1 USING THE REMOTE CONTROL

No.	Button name	Function
1		Turn on or turn off the unit
2		Set turbo function
3		Set operation mode
4		Set up&down swing status
5		Set I FEEL function
6		Switch temperature displaying type on the unit's display
7		Set light function
8		Set X-FAN function
9		Set sleep function
10		Set clock of the system
11		Set timer off function
12		Set timer on function
13		Set fan speed
14		Set temperature and time


## 1.2 PREPARATION BEFORE OPERATION

When using the remote control for the first time or after replacing the batteries, please set the current time as per the following steps:

- (1). Pressing  button,  is blinking.
- (2). Pressing  or  button, the clock time will increase or decrease rapidly.
- (3). Press  button again to confirm the time and return to display current time.

## 1.3 USING THE REMOTE CONTROL

### 1.3.1 Selecting Operation Mode

In unit on status, press  button to select operation mode in following sequence:

## 1. REMOTE CONTROLLER - cont.



 
### 1.3.2 Setting Temperature

In unit on status, press button to increase setting temperature and press button to decrease setting temperature. The range of temperature is from 16°C to 30°C.

**Note:** Under auto mode, you cannot change the temperature.

### 1.3.3 Adjusting Fan Speed

In unit on status, press button to adjust fan speed in following sequence:




**Note:**

- ①. When operation mode changes, fan speed is memorized;
- ②. Under dry mode, fan speed is low and can not be adjusted.

### 1.3.4 Setting Swing Function

 ◆ Setting up & down swing



- 1). Under simple swing status, press button to adjust up & down swing status;
- 2). Under fixed-angle swing status, press button to adjust up & down swing angle circularly as below:



**Note:** operate continuously left & right swing in 2 seconds, swing status will change according to above-mentioned order, or switch closed status and status;


## 1. REMOTE CONTROLLER - cont.

### 1.3.5 Setting Turbo Function


Under cool or heat mode, press  button to set turbo function. When  is displayed, turbo function is on. When it is not displayed, turbo function is off.

When turbo function is on, the unit operates in super high speed to achieve quick cooling or heating. When turbo function is off, the unit operates in setting fan speed.


### 1.3.6 Setting Light Function


The light on the receiver light board will display present operation status. If you want to turn off the light, please press  button. Press this button again to turn on the light.

### 1.3.7 Viewing Ambient Temperature

In unit on status, receiver light board is defaulted to display setting temperature. Press  button to view indoor or outdoor ambient temperature.

When  is displayed, the set in temperature is displayed.


When  is displayed, the indoor ambient temperature is displayed.


When  is displayed, the current outdoor temperature is displayed.

**Note:** set in temperature is always displayed in Remote Controller.

### 1.3.8 Setting X-Fan Function

In cool or dry mode, press  button to set X-FAN function.



When  is displayed, X-FAN function is on. When you cancel the function by pressing again the button, the icon will disappear.

When X-FAN function is on, after you have pressed the  button to stop the unit, the fan will keep on running for about 2 min. to blow away the water on the evaporator, thus eliminating the risk of mildew.

## 1. REMOTE CONTROLLER - cont.

### 1.3.9 Setting Sleep Function

In unit on status, press  button to turn on or turn off sleep function.


- ◆ When  is displayed, sleep function is on.
- ◆ When  is not displayed, sleep function is off.

#### Notes:

- ①. Sleep function can not be set in auto and fan mode;
- ②. When turning off the unit or switching mode, sleep function is cancelled;

### 1.3.10 Setting I FEEL Function

In unit on status, press  button to turn on or turn off I FEEL function.

When  is displayed, I FEEL function is on.

When  is not displayed, I FEEL function is off.






When I FEEL function is turned on, the unit will adjust temperature according to the temperature detected by the remote controller to achieve the best air-conditioning effect. In this case, you should place the remote controller within the valid receiving range.

### 1.3.11 Setting Timer






You can set the operation time of unit as you need. You can also set timer on and timer off in combination.

Before setting, check if the time of the system is the same as the current time. If not, please set the time according to current time.

#### 1). Setting timer off

- ①. Pressing  button, "OFF" is blinking and time displaying zone displays the timer time of last setting.
- ②. Press  or  button to adjust the timer time.
- ③. Press  button again to confirm setting. OFF is displayed and time displaying zone resumes to display current time.
- ④. Press  button again to cancel timer and OFF is not displayed.




#### 2). Setting timer on




- ①. Pressing  button, "ON" is blinking and time displaying zone displays the timer time of last setting.
- ②. Press  or  button to adjust the timer time.
- ③. Press  button again to confirm setting. ON is displayed and time displaying zone resumes to display current time.
- ④. Press  button again to cancel timer and ON is not displayed.


# 1. REMOTE CONTROLLER - cont.

## 1.4 SPECIAL FUNCTION BUTTONS



### 1.4.1 Setting Child Lock

Press  and  buttons simultaneously to lock the buttons on remote control and is displayed .



Press  and  buttons simultaneously again to unlock the buttons on remote control and  is not displayed.



If the buttons are locked,  blinks 3 times when pressing the button and any operation on the button is invalid.




### 1.4.2 Switching Temperature Scale

In unit off status, press  button and  button simultaneously to switch temperature scale between °C and °F.

### 1.4.3 Setting Energy Saving Function




In unit on status and under cool mode, press  and  buttons simultaneously to enter energy-saving mode.



- ◆ When  is displayed, energy-saving function is on.
- ◆ When  is not displayed, energy-saving function is off.

If you want to turn off the energy-saving function, press again on  and  buttons and  is no longer displayed.

**Note:** energy-saving function is only available in cooling mode and it will be exited when switching mode or setting sleep function.

### 1.4.4 Setting Absence Function

In unit on status and under heat mode, press  and  buttons simultaneously to enter absence function. Temperature displaying zone displays 8 and  is displayed.

Press  and  buttons simultaneously again to exit absence function. Temperature displaying zone resumes previous display and is not displayed.

## 1. REMOTE CONTROLLER - cont.

In winter, absence function can keep the indoor ambient temperature above 0°C to avoid freezing.

**Note:** Absence function is only available in heating mode and it will be exited when switching mode or setting sleep function.

### 1.5 REPLACING BATTERIES

- (1). Lift the cover along the direction of arrow (as shown in Fig 1①).
- (2). Take out the original batteries (as shown in Fig 1②).
- (3). Place two 7# (AAA 1.5V) dry batteries, and make sure the position of + and - terminals is correct (as shown in Fig 2③).
- (4). Reinstall the cover (as shown in Fig 2④).

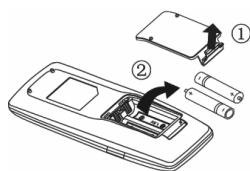


Fig.1

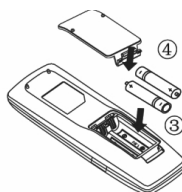



Fig.2

#### Notes:

- ①. The remote controller should be placed 1m away from the TV set or stereo sound sets.
- ②. The operation of remote controller should be performed within its receiving range.
- ③. If you need to control the main unit, please point the remote controller at the signal receiving window of the main unit to improve the receiving sensibility of main unit.
- ④. When the remote controller is sending signal, “” icon will be blinking for 1 second. When the main unit receives valid remote control signal, it will give out a sound.
- ⑤. If the remote controller does not operate normally, please take the batteries out and reinsert them after 30 seconds. If it still can't operate properly, replace the batteries.
- ⑥. When replacing the batteries, do not use old or different types of batteries, otherwise, it may cause malfunction.
- ⑦. When you won't use the remote controller for a long time, please take out the batteries.





**SEELEY INTERNATIONAL TECHNICAL SUPPORT**  
**SEELEY INTERNATIONAL SALES ORDER OFFICE**

**1300 650 399**  
**1300 650 141**

[siso@seeleyinternational.com](mailto:siso@seeleyinternational.com)

**WARRANTY SERVICE**

For refrigerated cooling/heating

**1300 526 477**

For access to Technical/Installation/Service information register online  
**[seeleyinternational.com/service](http://seeleyinternational.com/service)**

It is the policy of Seeley International to introduce continual product improvement.

Accordingly, specifications are subject to change without notice.

Please consult with your dealer to confirm the specifications of the model selected.

**Braemar**  
By **SEELEY INTERNATIONAL** 